 


## specifications

Wall mount enclosures shall be constructed of steel material. Enclosures shall provide cable bend radius protection. Enclosures offer optional discrete locking capability between installer and user segments.

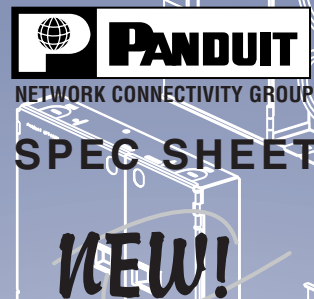

## OPTICOM™ Wall Mount Enclosures

### technical information

<b>Dimensions:</b>	FWME2:	WxHxD=12x10.18x2.32in. (304.8x258.6x59.1mm)
	FWME4:	WxHxD=16.11x12.25x3.52in. (409.2x311.0x89.4mm)
	FWME8:	WxHxD=16.11x20.25x3.52in. (409.2x514.2x89.4mm)
<b>Splicing tray and holder capacity:</b>	FWME2:	Holds (1) FSTHS which accommodates up to 2 FSTKs
	FWME4:	Holds (1) FST6H4 which accommodates up to 4 FST6s
	FWME8:	Holds (2) FST6H4s which accommodates up to 4 FST6s each
<b>Packaging:</b>	Includes accessory kit and labels	

### key features and ...benefits

<b>Improved strain relief clip</b>	Easier to install and align fiber with grommet
<b>Spooling area</b>	Manages and organizes fiber slack
<b>Rubber grommet</b>	Offers dust/debris protection and helps secure cable to enclosure
<b>Improved latch</b>	Provides improved closure
<b>Optional keyed lock</b>	Provides added security
<b>Works with all MINI-COM®, OPTI-JACK® ST, SC, Coax and Fiber Cassette modules</b>	Offers flexibility for a variety of applications
<b>Flush mounted latch</b>	Minimizes box depth from wall
<b>Optional splicing tray and holder</b>	Allows splicing within patching enclosures

### applications

PANDUIT® OPTICOM Wall Mount Enclosures are designed to manage and organize fiber distribution in areas where space is limited. They can also be used to manage cable from outside the facility. Enclosures can be used as an interconnect or cross-connect in any

telecommunications room and can use any standard FAP or FMP series adapter panel. OPTICOM Enclosures are completely modular and can manage both fiber and copper cables.

#### OPTICOM Wall Mount Enclosures

<b>12/24 fiber (2 FAPs):</b>	FWME2
<b>24/48 fiber (4 FAPs):</b>	FWME4
<b>48/96 fiber (8 FAPs):</b>	FWME8

#### Adapter Panels

<b>6 FJ:</b>	FMP6
<b>Blank panel:</b>	FAPB

#### ST Adapter Panels

<b>6 ST:</b>	FAP6WST
<b>8 ST:</b>	FAP8WST

#### SC Adapter Panels

<b>6 simplex SC:</b>	FAP6WBUSC
<b>3 duplex SC:</b>	FAP3WBUDSC
<b>6 duplex SC:</b>	FAP6WBUDSC

#### Splice Tray

<b>FWME4, FWME8</b>	
<b>Splice tray:</b>	FST6
<b>Holder:</b>	FST6H4
<b>FWME2</b>	
<b>Splice tray:</b>	FSTK
<b>Holder:</b>	FSTHS

#### Door Locks

<b>Door locks:</b>	FELU (user side)
	FELS (service side)

 
#### installer tip

**For added security, use optional locks FELU or FELS.**


Visit our website at: [www.panduit.com/ncg](http://www.panduit.com/ncg)

# OPTICOM™ Wall Mount Enclosures


## Wall Mount Enclosures

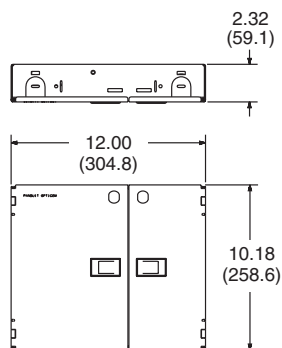

**FWME2**


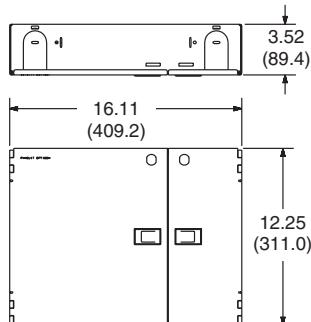 


**FWME4**

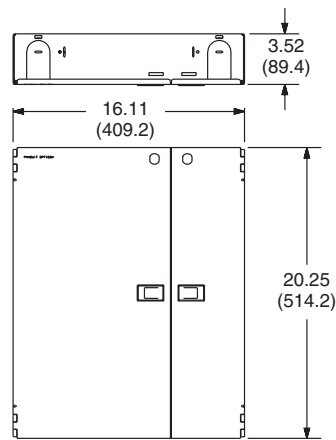 


**FWME8**
  
## Adapter Panels




**FAP6WBUSC**

 


**FAP6WST**

 
## Splice Trays

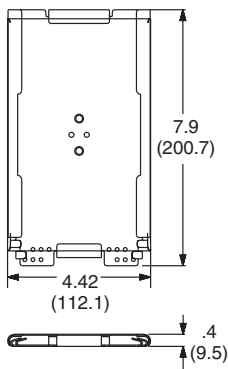


**FST6**

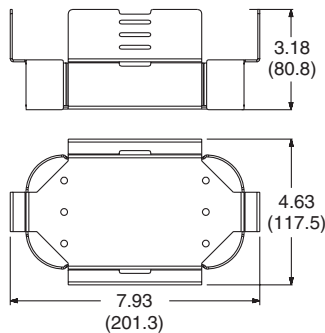 

**FST6H4**

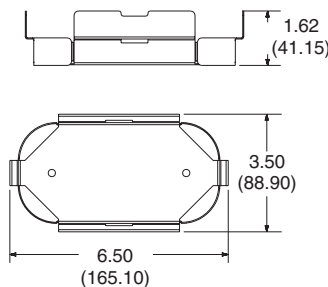 

**FSTHS**

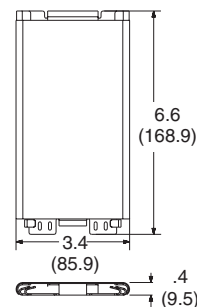 

**FSTK**

Dimensions are in inches (Dimensions in parentheses are in millimeters)

Our products are warranted to be free from defects in material and workmanship at the time of sale but our obligation under this warranty is limited to the replacement of any product proved to be defective within 6 months (for product) or 90 days (for tools) from the date of delivery. Tool warranty is void if Panduit tools are modified, altered or misused in any way. Use of Panduit tooling with any product other than the specified Panduit products for which the tool was designed, constitutes misuse. Before using, user shall determine the suitability of the product for his intended use and user assumes all risk and liability whatsoever in connection therewith.

This warranty is made in lieu of and excludes all other warranties, expressed or implied. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR USE ARE SPECIFICALLY EXCLUDED. Neither seller nor manufacturer shall be liable for any other injury, loss or damage whether direct or consequential, arising out of the use of, or the inability to use, the product.

The information contained in this literature is based on our experience to date and is believed to be reliable. It is intended as a guide for use by persons having technical skill at their own discretion and risk. We do not guarantee favorable results or assume any liability in connection with its use. Dimensions contained herein are for reference purposes only. For specific dimensional requirements consult the factory. This publication is not to be taken as a license to operate under, or a recommendation to infringe any existing patents. This supersedes and voids all previous literature, etc.



NETWORK CONNECTIVITY GROUP

WORLD HEADQUARTERS  
PANDUIT CORP.  
Tinley Park, Illinois, USA  
Customer Service: 800-777-3300  
Technical Support: 866-405-6654  
Fax: 708-444-6993  
Email: ncginfo@panduit.com  
Internet: www.panduit.com/ncg

**For Pricing and Further Information —  
Contact your local authorized  
PANDUIT PAN-NET® Distributor or Sales Office**

PANDUIT CANADA  
Markham, Ontario  
Phone: 800-777-3300

PANDUIT EUROPE LTD.  
London, UK  
Phone: 44 208-601-7200

PANDUIT SINGAPORE PTE. LTD.  
Republic of Singapore  
Phone: (65) 6379 6700

PANDUIT JAPAN  
Tokyo, Japan  
Phone (81) (3) 3767-7011

PANDUIT LATIN AMERICA  
Jalisco, Mexico  
Phone: (52) 3 666-2501

PANDUIT AUSTRALIA PTY. LTD.  
Victoria, Australia  
Phone: (61) 3-9794 9020