2.15

U/L APPROVED PART NUMBERS

11960-X06 11960-X12 11960-X18 11963-X06 11963-X12 11963-X18 11961-X06 11961-X12 11961-X18 11964-X06 11964-X12 11964-X18 11962-X06 11962-X12 11962-X18 11965-X06 11965-X12 11965-X18

COMPONENTS

- Step 1 On a flat surface, align cross-members (B) and
- each corner as depicted and loosely secure in front mounting holes with hex bolts (E) and
- Step 3 Slide legs (A) into position with slot fitting under
- Step 4 Tighten all bolts and install remaining hex bolts & hex nuts throughout remaining alignment
- Step 5 Use a level to assure wall rack is level while

Note: Wall secured us screws (G plywood b wall framil capability. intended f surface; for installer mandardware.	sing all provided to provide to as to a to a	possible led to 3/ ard secu sure loa crews a nting to v	e hex /4" Ired to ad bea re wood ace, t	lag o aring en he	to u a

Component Description Quantity Item Α Wall Attachment Brackets (Legs) В **Cross Members** C Mounting Channels 2 Corner Assembly Brackets D 4 Ε 1/4" - 20 x 5/8 Hex Bolts 16 F 1/4" - 20 Hex Nuts 16 G 1/4" x 2" Hex Lag Screws (not shown) Η 50 pack #12 - 24 Mounting Screws (not shown)

CAUTION: Do not overload rack. UL approved racks can support up to 200 lb (90.7 kg) of equipment when properly installed to wall using all mounting holes.

SHEET 1



INSTALLATION INSTRUCTIONS **FIXED WALL-MOUNT EQUIPMENT RACK**

THIS DRAWING CONTAINS INFORMATION PROPRIETARY TO CHATSWORTH PRODUCTS, INC. ANY REPRODUCTION DISCLOSURE OR USE OF THIS DRAWING IS EXPRESSLY FORBIDDEN EXCEPT AS AGREED TO IN WRITING BY CHATSWORTH PRODUCTS, INC.

11792-X25

11807-X12 11807-X18 11807-X25

D B SLOT


INSTRUCTIONS

Step 1 Loosen hex bolt on pre-installed corner ramp (D) and wall attachment cross-member (B).

11792-X12 11792-X18

- Step 2 Slide legs (A) into position with slots fitting under previously loosened bolts.
- Step 3 Tighten all bolts and install remaining hex bolts and hex nuts through remaining alignment holes with a 7/16" socket wrench.
- **Step 4** Use a level to assure wall rack is level while securing to wall.
- Step 5 Align lower pivot pins of mounting frame (C) into lower corner ramps.

 Retract upper pivot pins and secure in upper corner ramps.

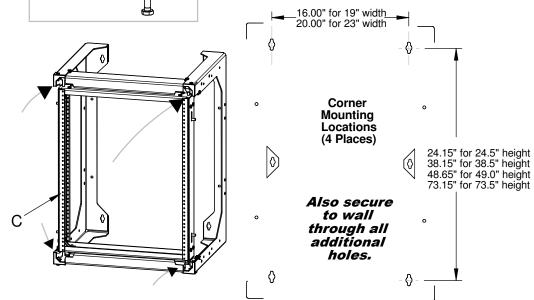

Note: Wall-mount rack must	
be secured using all possible	
hex lag screws (G) provided	ı
to 3/4" plywood back-board	
secured to wall framing to	٠
assure load bearing	
capability. Lag screws are	
intended for mounting to	
wooden surface; for masonry	
surface, the installer must	
provide appropriate	
hardware.	

COMPONENTS					
Item	Quantity	Component Description			
Α	2	Wall Attachment Brackets (Legs)			
В	2	Wall Attachment Cross-Members			
С	1	Mounting Frame			
D	4	Corner Assembly Ramps (pre-installed in cross-members)			
Е	16	1/4" - 20 x 5/8 Hex Bolts			
F	16	1/4" - 20 Hex Nuts			
G	8	1/4" x 2" Hex Lag Screws (not shown)			
Н	50 pack	#12 - 24 Mounting Screws			

11808-X12 11808-X18

11795-X18

11795-X12

<u>CAUTION</u>: Do not overload rack. UL approved racks can support up to 100 lb (45.4 kg) of equipment in the open and closed position when properly installed using all mounting holes. Load capacity can be increased by using a Heavy Duty Swing Gate Kit (sold separately). Contact your distributor for more information.



SHEET 2

11793-X25

11794-X25

11808-X25

11795-X25

INSTALLATION INSTRUCTIONS STANDARD SWING GATE WALL RACK

THIS DRAWING CONTAINS INFORMATION PROPRIETARY TO CHATSWORTH PRODUCTS, INC. ANY REPRODUCTION DISCLOSURE OR USE OF THIS DRAWING IS EXPRESSLY FORBIDDEN EXCEPT AS AGREED TO IN WRITING BY CHATSWORTH PRODUCTS, INC.