



Keys, your number's up.

Schlage Touch™

With the Schlage Touch™ Keyless Touchscreen lock, there's no keyhole for intruders to pick or bump, and no need to ever rekey. Just use the fingerprint-resistant touchscreen to enter with an access code – no key necessary. All in a slim profile that's every bit as sleek as it is strong.

No more keys to lose, hide, carry or forget

- No key needed: use a convenient access code
- Works in the rain and with gloves
- Eliminates need to re-key or cut new keys
- 2-year battery life with low battery icon and 9V battery backup

Slim profile without sacrificing strength

- Easily fits between front door and screen door
- Available in a variety of styles and finishes to complement your home
- Sleek lever options coordinate with interior hardware

Choose your own access codes

- Create and delete codes for visiting friends and family
- Memory for 19 access codes

 
Easy installation

- Installs in minutes with a screwdriver - no wiring needed
- Guaranteed to fit on standard doors


Finishes

Function	605	608	609	613	618	619	620	622	625	626	716
BE375 Camelot	▪		▪			▪		▪	▪	▪	▪
BE375 Century						▪		▪	▪	▪	▪
(CAM)											
Camelot	605	608	609	613	618	619	620	622	625	626	716
FE695 Accent	▪		▪			▪		▪	▪	▪	▪
FE695 Accent	▪		▪			▪				▪	▪
(CEN)											
FE695 Broadway						▪		▪	▪	▪	▪
FE695 Elan										▪	
FE695 Latitude						▪		▪	▪	▪	▪
FE695 Merano						▪		▪	▪	▪	▪

Door preparation

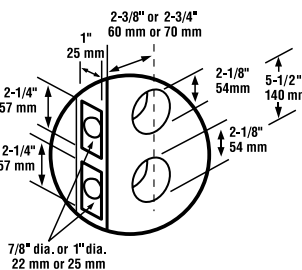

Door Preparation

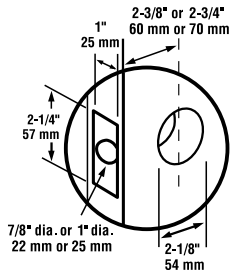 

Schlage Touch™ deadbolts



BE375
Camelot
(CAM)



BE375
Century
(CEN)

Schlage Touch™ levers



FE695
Camelot x Accent
(CAM) (ACC)




FE695
Camelot x Flair
(CAM) (FLA)



FE695
Century x Broadway
(CEN) (BRW)



 FE695
Century x Latitude
(CEN) (LAT)

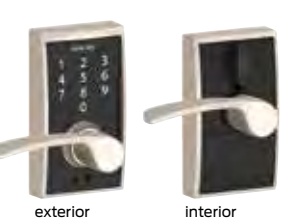

FE695
Century x Merano
(CEN) (MER)