




ILCO

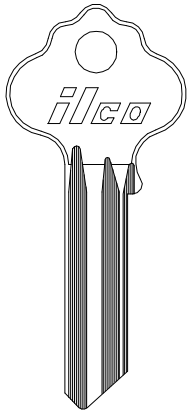


  
**1054MT**  
IN33

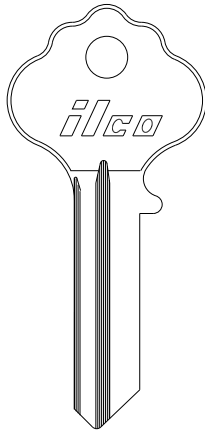

  
**1054R**  
—

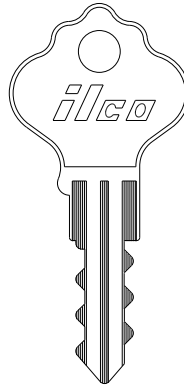

  
**1054N\***  
—

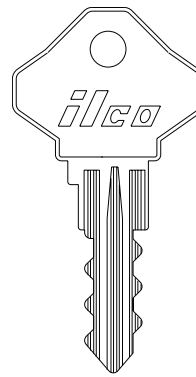


  
**1054P\***  
—


\* NOTE: This special blank is not a cut key. It is to be used the same as regular blanks for duplicating, cutting from code or from depth keys. It will save the locksmith 80% of his work, and the key can be cut more accurately and in less time. After cutting the special blank, when compared with the original keys, they will not be exactly alike in the pass cut positions, but this is not important as long as they match with the original where the tumblers rest on the key.

**ILCO**  
EZ


ILCO

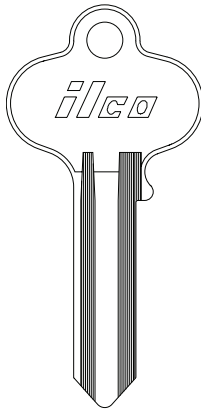

  
**1054TW**  
IN34

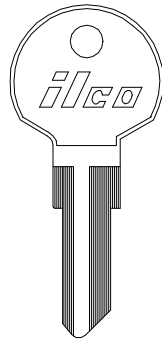


  
**1054UN**  
IN29

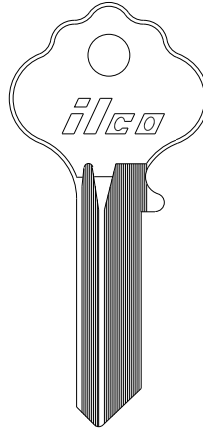

  
**1054X**  
—




  
**B1054B**  
—

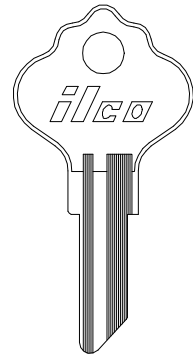

  
**H1054B**  
EL8

**ILCO**  
EZ


ILCO

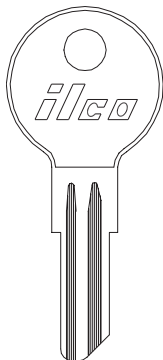


  
**H1054S**  
—




  
**H1054L**  
—

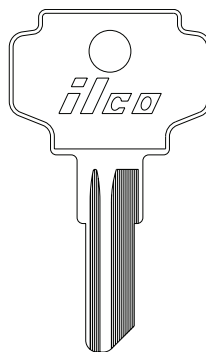

  
**K1054B**  
IN24

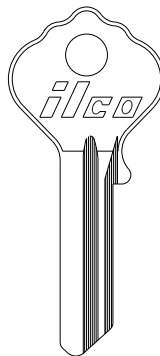

  
**L1054AR**  
—

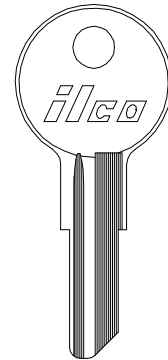

  
**L1054B**  
IN8

**ILCO**  
EZ