


Key-In-Knob Cylinders

The 8800-xx-1006 and 3400-xx-1006 for Arrow—LSDA—Schlage key-in-knob cylinders (“06” kit)

8400-xx-1006	uncombined
8400-xx-1206-06	factory combined
3400-xx1006	uncombined
3400-xx-1206-06	factory combined

xx = Finish

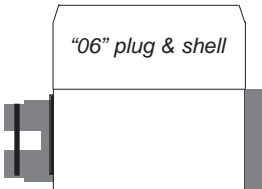


The “06” cylinder also accepts original Arrow, Ilco, Lori, Marks and Sargent fixed tailpieces.  
The “06” cylinder kit includes a cylinder assembly and one each of the components shown:



1590-80-2000



4700-80-2001



4700-80-2002



3400-00-2009 security bushing

The “06” cylinder kit can be used for the following lock types. For details, please refer to the specific line drawing of the product.

Manufacturer	Lock Type	Model #	Manufacturer	Lock Type	Model #
American	3600 and 3700 series padlocks	-01	Master	System 29 padlocks	01
Arrow	M series Tudor and Darrin	-26	Trilogy	2700 and 3000 levers	-03
Falcon	X series grade 1 Hana Knob	-33	Master	Pro series	-01


**AMERICAN** Padlocks—see pages 2–23

**AMEROCK** Same as Arrow retrofits listed below

**ARROW** *H, L, S & W knobs and levers, Q and M series levers*

8400-xx-1299-09	factory combined
8400-xx-1099	uncombined and use*
3400-xx-1299-09	factory combined
3400-xx-1099	uncombined and use*


\*1590-80-2000 SD/3A tailpiece, vertical  
\*3450-80-2003 spacing washer

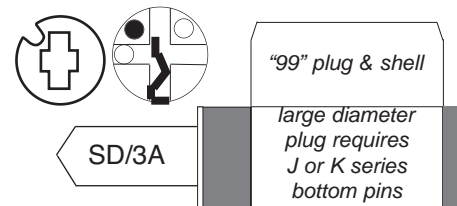

**ARROW** *M series Tudor and Darrin*

8400-xx-1206-26	factory combined
8400-xx-1006	uncombined and use*
3400-xx-1206-26	factory combined
3400-xx-1006	uncombined and use*


\*1590-80-2000 SD/3A tailpiece, vertical  
\*3400-80-2000 SD/3A tailpiece, vertical

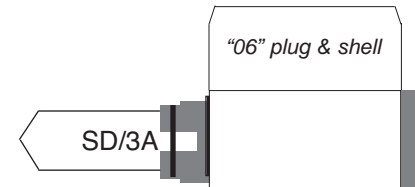

**ARROW** *M series Ball knobs*

8400-xx-1299-20	factory combined
8400-xx-1099	uncombined and use*
3400-xx-1299-20	factory combined
3400-xx-1099	uncombined and use*


\*4700-80-2001 SA/3B tailpiece, vertical  
\*3450-80-2003 spacing washer

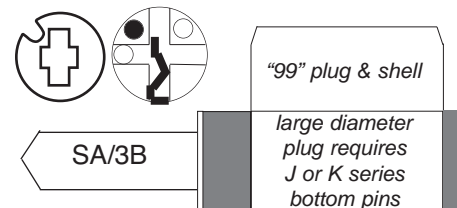

**ARROW** *Single cylinder deadlocks*

8400-xx-1299-90	factory combined
8400-xx-1099	uncombined and use*
3400-xx-1299-90	factory combined
3400-xx-1099	uncombined and use*

\*3450-00-2000 lost motion tailpiece  
\*3450-80-2004 timing washer

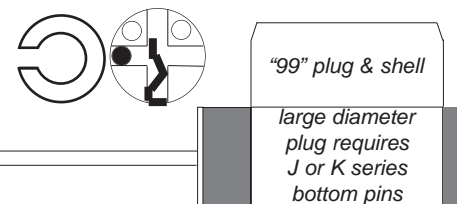

## Key-In-Knob Cylinders

### FALCON


#### **S Series grade 2 knobs, except Hana**

8400-xx-1299-13	factory combined
8400-xx-1099	uncombined and use*
3400-xx-1299-13	factory combined
3400-xx-1099	uncombined and use*

\*4700-80-2004 FS tailpiece, horizontal

\*3450-80-2003 spacing washer

Or, use original Falcon tailpiece TP-2 or TP-3 with Falcon retainer TPR-1 may be used.

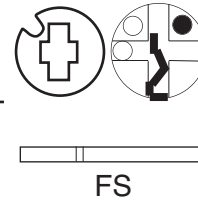

"99" plug & shell

large diameter  
plug requires  
J or K series  
bottom pins

### FALCON


#### **S Series grade 2, Hana knobs**

8400-xx-1299-33	factory combined
8400-xx-1099	uncombined and use*
3400-xx-1299-33	factory combined
3400-xx-1099	uncombined and use*

\*4700-80-2006 FH tailpiece, horizontal

\*3450-80-2003 spacing washer

Or, use Falcon tailpiece TP-3 or TP-4 with Falcon retainer TPR-1.

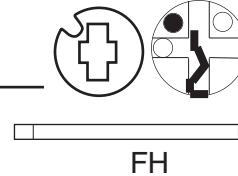

"99" plug & shell

large diameter  
plug requires  
J or K series  
bottom pins

### FALCON

#### **T Series, grade 1 levers**

8400-xx-1299-01	factory combined
8400-xx-1099	uncombined and use*
3400-xx-1299-01	factory combined
3400-xx-1099	uncombined and use*

\*Most functions use Falcon no. 030730-001-30

\*T381 inside cylinder only use Falcon no. 030730-003-30

\*T571 only use Falcon no. 030730-005-30

**Falcon parts are not supplied.**



"99" plug & shell

large diameter  
plug requires  
J or K series  
bottom pins

### FALCON

#### **X Series grade 1 knobs, except Hana**


8400-xx-1299-12	factory combined
8400-xx-1099	uncombined and use*
3400-xx-1299-12	factory combined
3400-xx-1099	uncombined and use*

\*4700-80-2003 FX tailpiece, horizontal

\*3450-80-2003 spacing washer

Or, use Falcon tailpiece TP-1, TP-3, or TP-5 with Falcon retainer TPR-1.

**Falcon parts are not supplied.**

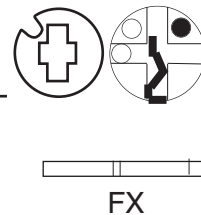

"99" plug & shell

large diameter  
plug requires  
J or K series  
bottom pins

### FALCON

#### **X Series grade 1, Hana knobs**


8400-xx-1206-33	factory combined
8400-xx-1006	uncombined*
3400-xx-1206-33	factory combined
3400-xx-1006	uncombined*

\*4700-80-2006 FH tailpiece, horizontal

\*3450-80-2003 Spacing Washer

Or, use Falcon TP-2, TP-4 or TP-6 with retainer TPR-1

**Falcon parts are not supplied.**

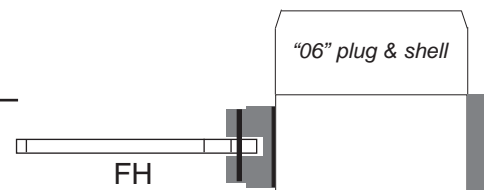

"06" plug & shell

**\*NOTE:** When ordering cylinder uncombined, FH tailpiece must be requested.

**\*NOTE:** When replacing 7-pin Falcon cylinder, a 6-pin Falcon cylinder spacer must be used.

## Key-In-Knob Cylinders


### SCHLAGE

#### **C & D Series, and Vandlgard grade 1 levers**

8400-xx-1299-18	factory combined
8400-xx-1099	uncombined and use*
3400-xx-1299-18	factory combined
3400-xx-1099	uncombined and use*

\*1590-80-2000 SD/3A tailpiece, vertical

\*3450-80-2003 spacing washer

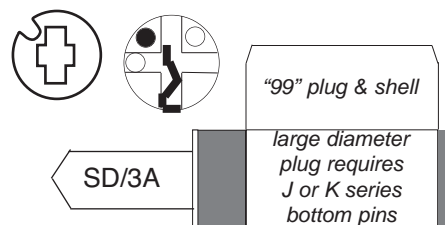


### SCHLAGE

#### **S Series grade 2 levers**

8400-xx-1299-01	factory combined
8400-xx-1099	uncombined and use*
3400-xx-1299-01	factory combined
3400-xx-1099	uncombined and use*

\*Schlage S series driver S605-228

\*Schlage cylinder sleeve S605-192

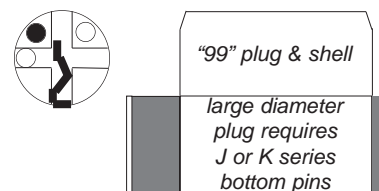


**Schlage parts are not supplied.**

### SELECT or MEDECO

#### **2000 Series deadlocks All-N-One deadlocks**

8400-xx-1299-01	factory combined
8400-xx-1099	uncombined and use*
3400-xx-1299-01	factory combined
3400-xx-1099	uncombined and use*

\*No attachments.

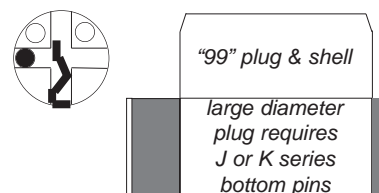


### TRILOGY

#### **2700, 3000 levers**

8400-xx-1206-03	factory combined
8400-xx-1006	uncombined and use*
3400-xx-1206-03	factory combined
3400-xx-1006	uncombined and use*

\*4700-80-2005 E tailpiece, vertical

\*3400-00-4008 security washer, plug

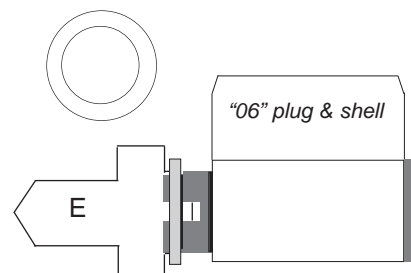


### TRILOGY

#### **2500 bypass, knob designs prior to 5-97**

8400-xx-1299-17	factory combined
8400-xx-1099	uncombined and use*
3400-xx-1299-17	factory combined
3400-xx-1099	uncombined and use*

\*1590-80-2000 SD/3A tailpiece, horizontal

\*3450-80-2003 spacing washer

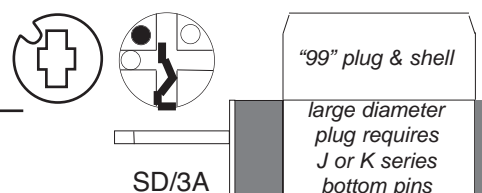

## Padlocks—Key-in-Knob Cylinders

### Kaba 1411 or New Standard

8400-xx-1299-41	factory combined
8400-xx-1099	cylinder with Kaba P tailpiece
3400-xx-1299-41	factory combined
3400-xx-1099	cylinder with Kaba P tailpiece

The following can be made from 8400-xx-1099 or 3400-xx-1099 cylinder kit using OEM drivers:

### Master ProSeries—Use adapter #0298-0628 from Master.

8400-xx-1299-01	factory combined
3400-xx-1299-01	factory combined

### Schlage PL series—Use padlock driver from Schlage.

8400-xx-1299-01	factory combined
3400-xx-1299-01	factory combined

### Schlage old style 45-101—Use padlock driver from Schlage.

8400-xx-1299-01	factory combined
3400-xx-1299-01	factory combined

The following can be made from 8400-xx-1006 or 3400-xx-1006 cylinder kit using OEM adapters:

### Master System 29—Use with adapter from Master

8400-xx-1206-01	factory combined
3400-xx-1206-01	factory combined

### Master Pro Series—Use adapter #0298-0626 from Master.


8400-xx-1206-01	factory combined
3400-xx-1206-01	factory combined

### American 3600 & 3700—Use with modified adapter. See below.


8400-xx-1206-01	factory combined
3400-xx-1206-01	factory combined

## 6-pin 140

Made with the “99”

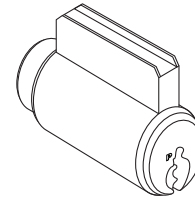

Made with the “06”

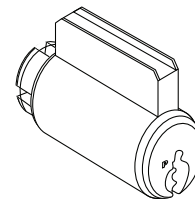


American padlocks

Use 8400-xx-1006 or 3400-xx-1006 cylinder.


Shorten Medeco adapter .050"



Lori adapter may also be modified.



1. “L” adapter



2. shorten adapter\*



3. notch for key tip and retainer ring

\*Dealers have reported that shortening isn't always necessary.