




Bluetooth®

90S+



In Work Tray

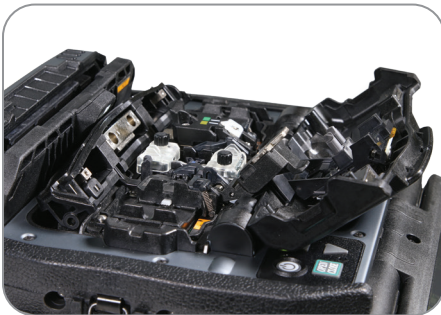

Wind Protector Open

Fujikura 90S+ Fusion Splicer

The Fujikura 90S+ core alignment fusion splicer solves common problems seen in the field—from splicing poor quality legacy fiber to automated equipment maintenance and upkeep. The Fujikura 90S+ can be use in multiple field splicing applications including bend-insensitive fibers in drop cables, long-haul terrestrial and submarine LEAF® fibers, loose buffer fiber, splice-on connectors, and the list goes on. The speed and accuracy of the 90S+ make it suitable for certain production and specialty environments where high output, tight packaging, and low loss requirements are required.

Regardless of your scenario, the Fujikura 90S+ is designed to keep you in the field with an extended battery life of 300 splice and heat cycles. With its multiple automated and easy-to-use features, the 90S+ alleviates the need for traditional operation tasks such as frequent arc calibrations, cleaver blade rotations, cleaver usage tracking, and manual splicing operations. A redesigned work tray, cooling tray, and optional cable clamp make the 90S+ kit more versatile than its predecessors in adapting to varying work conditions and environments.

When splicing loose buffer fiber, additional sheath clamps are not needed. The standard universal sheath clamp now handles both loose and tight buffer fibers. The new Active Fusion Control (AFC) technology improves splice losses for fibers that possess a poor cleave angle. Combined with Active Blade Management between the splicer and cleaver, the Fujikura 90S+ contains a robust set of splicing features that will reduce the likelihood of poor splice installations or repairs.

Features

- Cleaver tracking and upkeep with wireless communication
- Improved real-time arc control for fibers with poor cleave angles
- Automated wind protector, sheath clamps and splice operation
- Loose and tight buffer with same sheath clamp
- Lithium-ion battery with 300 splices/shrinks per charge
- PC software and 90S+ manual downloaded from splicer
- Multi-function transit case with integrated workstation

Applications

- Distribution fiber repair
- Long-haul network installation
- Field termination with splice-on connectors
- Access network installation
- Fanout kits, pigtails and splice cassettes
- OSP cable installation and repair
- Optical modules – splitters, couplers, MUXs, EDFAs and attenuators

STOCK ITEM

Fujikura 90S+ Fusion Splicer

Ordering Information

DESCRIPTION	AFL NO.
90S+ Fusion Splicer (machine only) Includes: ADC-20 AC Adapter, ACC-14 AC Cord, BTR-15 Battery, ELCT2-16B Spare Electrodes (pair), Sheath Clamps, SP-03 Fiber Holder Set Plates, USB-01 Cable, Alcohol Dispenser, Screwdriver, Splicer Carrying Strap, Quick Reference Guide, TS-03 Tripod Screw, Work Tray J-Plate, SS03 single fiber stripper, CC39 Transit Case with Carrying Strap and Two Year Warranty	S017519
90S+ Fusion Splicer Kit (with cleaver) Includes: CT50 Cleaver, ADC-20 AC Adapter, ACC-14 AC Cord, BTR-15 Battery, ELCT2-16B Spare Electrodes (pair), Sheath Clamps, SP-03 Fiber Holder Set Plates, USB-01 Cable, Alcohol Dispenser, Screwdriver, Splicer Carrying Strap, Quick Reference Guide, TS-03 Tripod Screw, Work Tray J-Plate, SS03 single fiber stripper, CC39 Transit Case with Carrying Strap and Two Year Warranty	S017521
90S+ Fusion Splicer without Bluetooth (machine only) Includes: ADC-20 AC Adapter, BTR-15 Battery, ACC-14 AC Cord, ELCT2-16B Spare Electrodes (pair), Sheath Clamps, SP-03 Fiber Holder Set Plates, USB-01 Cable, Alcohol Dispenser, Screwdriver, Splicer Carrying Strap, Quick Reference Guide, TS-03 Tripod Screw, Work Tray J-Plate, SS03 Single Fiber Stripper, CC39 Transit Case with Carrying Strap and Two Year Warranty	S017520
One Year Extended Warranty	S012996
Two Year Extended Warranty	S013000

Recommended Products for the 90S+

DESCRIPTION	AFL NO.
Cleavers	
CT08 Cleaver	S017004
CT50 Cleaver	S017030
Fiber Holders (pair)	
FH-70-250 (250 µm coated fiber)	S017111
FH-70-900 (900 µm jacketed fiber)	S017113
FH-70-160 (160 µm coated fiber)	S017095
FH-70-200 (200 µm coated fiber)	S017711
FH-60-LT900 (Loose buffer 900 µm fiber)	S015181
FUSEConnect® Accessories	
FH-FC-20 (900 µm within 2.0 mm sheathing) (each)	S014696
FH-FC-30 (900 µm within 3.0 mm sheathing) (pair)	S014695
FH-FC-900 (900 µm cable) (each)	S014697
CLAMP-FC-2000 (pair)	S014705
CLAMP-FC-3000 (single holder)	S014704
Power Supply Options and Equipment	
ADC-20 AC Adapter	S017513
ACC-14 AC Power Cord	S014536
BTR-15 Battery	S017512
DCC-20 Power Cord	S017527
(connects AC Adapter to cigarette lighter socket)	
DCC-21 Power Cord	S017528
(connects AC Adapter to power source via alligator clips)	

DESCRIPTION	AFL NO.
Miscellaneous	
SS03 Single fiber stripper (3 hole)	S017098
SS01 Single fiber stripper (1 hole)	S017099
ELCT2-16B Electrodes	S017103
SP-03 Fiber Holder Set Plates	S017518
S90 Universal Sheath Clamps	S017696
Portable Tripod Workstation (see product profile for more detail)	S014773
ASW-02 Splicing Workstation (see product profile for more detail)	S010532
WT-09R Work Tray Right	S017515
WT-09L Work Tray Left	S017516
JP-09 Work Tray J-Plate	S017517
JP-10 J-Plate (Cooling tray attaches to splicer)	S017522
JP-10-FC J-Plate with Fiber Clamps	S017523
TS-03 Tripod Screw (90 Series)	S017524
ST-02 Fusion Splicer Strap	S017525
CLAMP-DC-12 (Drop cable clamp for work tray)	S017550
USB-01 Cable	S014777
CC39 Transit Case	S017514
Splicer V-Groove Cleaning Kit	S014397
ST-03 Case and Work Tray Strap	S017549



Fiber Holders

- Wide range of sizes for various applications
- Loose & Tight Buffer options available



Portal Tripod Work Station

- Sturdy work tray supports the splicer, cleaver and accessories
- Tripod supports a load capacity of up to eleven pounds



V-Groove Cleaning Kit

- Removes environmental contamination from the v-groove of the splicer
- Maintains performance and ensures fiber alignment

Fujikura 90S+ Fusion Splicer

Specifications

PARAMETER		VALUE
Fiber Alignment Method		Active core alignment
Fiber Count Can Be Spliced		Single fiber
Applicable Fiber	Fiber Type	Single-mode optical fiber
	Cladding Diameter	Multimode optical fiber
Applicable Coating	Sheath Clamp	80 to 150 μ m
	Coating dia.:	Max. 3,000 μ m
Fiber Splice Performance	Splice Loss	Cleave length: 5 to 16 mm
		ITU-T G.652: Avg. 0.02 dB
		ITU-T G.651: Avg. 0.01 dB
		ITU-T G.653: Avg. 0.04 dB
		ITU-T G.654: Avg. 0.04 dB
		ITU-T G.655: Avg. 0.04 dB
	Splice Time	ITU-T G.657: Avg. 0.02 dB
		SM FAST mode: Avg. 8 to 10 sec.
Applicable Protection Sleeve	Sleeve Type	SM AUTO mode: Avg. 11 to 13 sec.
	Sleeve Length	AUTO mode: Avg. 14 to 16 sec.
	Sleeve Dia.	Heat-shrinkable sleeve
Sleeve Heat Performance	Heat Time	Max. 66 mm
		Max. 6.0 mm before shrinking
Fiber Tensile Test Force		60 mm slim mode: Avg. 9 to 10 sec.
Electrode Life		60 mm mode: Avg. 13 to 15 sec.
Physical Description		Approx. 2.0 N
Environmental Condition	Dimensions W	Approx. 5,000 splices
	Dimensions D	Approx. 170 mm without projection
	Dimensions H	Approx. 173 mm without projection
	Weight	Approx. 150 mm without projection
AC Adaptor	Temperature	Approx. 2.8 kg including battery
	Humidity	Operate: -10 to 50°C
	Altitude	Storage: -40 to 80°C
Battery Pack	Input	Operate: 0 to 95% RH non-condensing
	Type	Storage: 0 to 95% RH non-condensing
	Output	Max. 5,000 m
	Capacity	AC 100 to 240 V, 50/60 Hz, Max. 1.5 A
	Temperature	Rechargeable Lithium Ion
	Battery Life	Approx. DC 14.4V / 6,380 mAh
Display	Recharge Time	Approx. 300 splice and heat cycles
	LCD Monitor	Recharge: 0 to 30°C
Illumination	Magnification	Storage: -20 to 30°C
	V-Grooves	Approx. 500 recharge cycles
Interface	PC	Approx. 5-8 hours from empty
	External Led Lamp	TFT 5 inches with touch screen
	Ribbon Stripper	200 to 320x
	Wireless	LED lamp
Data Storage	Splice Mode	USB2.0 Mini B type
	Heat Mode	USB2.0 A type, Approx. DC5V, 500 mA
	Splice Result	Mini DIN 6 pin, DC12V, Max. 1A
	Splice Image	Bluetooth 4.1 LE
Screw Hole For Tripod		100 splice modes
Other Features	Automatic Functions	30 heat modes
		20,000 splices
		100 images
		1/4-20 UNC
		Splice mode select by fiber type analysis
	Reference Guide	Discharge power calibration
Other Features	Sheath Clamp	Wind protector: open/close
	Electrode	Sheath clamp: open
		Heater lid: open/close
		Heater clamp: open/close
		Video and PDF file stored in splicer
		Easy sleeve positioning clamp
		Replaceable without tool